


ALDA

keep your kitchen alive

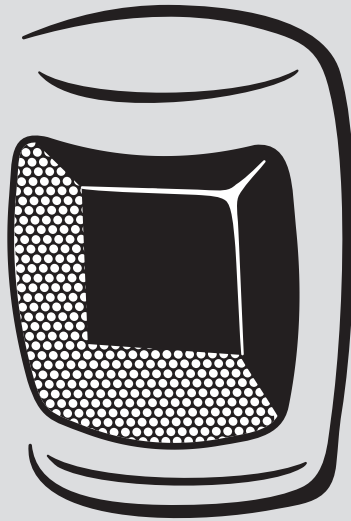

PTC HEATER SAA 713


IS: 302-2-30



CM/L-9861303

USER'S GUIDE

KNOW YOUR PTC HEATER

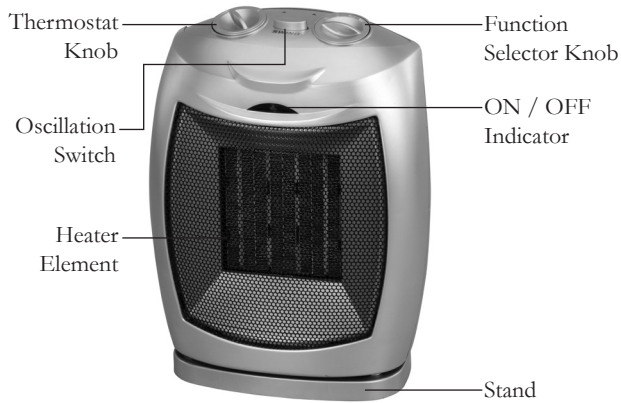

HOW TO USE YOUR PTC HEATER

Place the heater on the floor at least 50cm away from the wall and any other objects such as furniture, curtains or plants. (Make sure the power supply used corresponds to the one on the rating label). Place the PTC Heater on a firm level surface. Switch ON the mains button behind the unit.

Thermostat: The desired room temperature can be adjusted using the thermostat. Simply turn the thermostat knob clockwise, to increase the heat, and anti-clockwise to decrease the temperature.

Function Selector Knob: The knob has 4 possible settings:

- O : Off
- ✦ : FAN - This setting is for summer service and the fan blows cool air
- I : Low Heating (750W)
- II : High Heating (1500W)

OSC: The heater oscillates continuously to a radius of 70 degrees on selection of this function.

OVERHEAT PROTECTION

An overheat protection switches off the appliance automatically in case of overheat, e.g. due to total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the grids. Then switch it ON as described above.

The appliance should operate normally. Should the problem persist, please contact the nearest customer service.

TIP-OVER SAFETY

To avoid accidents or mishaps due to the falling of the heater your Alda PTC heater comes with an incline protection device. This switches OFF the heater automatically as soon as the heater bends beyond an angle. The heater starts working again once it is put upright.

CLEANING AND MAINTENANCE

Always disconnect the heater from the mains supply before cleaning. Clean the outside of the heater with a damp cloth. Clean the fan filters with the help of soft brush. DO NOT use waxes or polishes as these may react with the heater and cause discoloration.

DO'S & DON'TS

- Always disconnect the heater from the mains supply when not in use and when cleaning.
- Do not leave the heater “ON” unattended.
- Never cover the heater when working as this may lead to risk of fire.
- Keep the heater at a distance of at least 50cm from any combustible material, such as furniture, curtains, bedding clothes or papers.
- Keep the heater clean. Do not allow objects to enter the ventilation, as this may cause electric shock, fire or damage the heater.
- Close supervision is required when any appliance is used near or by children.
- Never allow the cord to touch wet or hot surfaces, become twisted or be within the reach of children.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner.
- Never use the appliance with a damaged cord or plug or after the appliance has malfunctioned or been damaged in any way.
- Never attempt to open any part or dismantle the controls. Responsibility for failure cannot be accepted if these instructions have been ignored.
- Do not use the appliance for anything other than its intended use.
- This appliance is intended for household use only.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

WARRANTY

The company warrants to get the PTC Heater or any part thereof repaired free of charge for a period of one year from the date of purchase, should any defect develop due to faulty or defective workmanship or material. However, the plastic parts, glass, buttons and items subject to normal wear and tear due to operation are not covered under warranty.

Terms of Warranty:

- The Bill/Cash Memo should be presented.
- No repair work should be carried out by any unauthorised person.
- PTC Heater should be used as per the directions given in the user's guide.
- Any defects caused by accident, improper or reckless use, abuse or commercial use are not covered under warranty.
- The Serial no. has not been tampered with.
- The modification/alteration of any nature is made in the PTC Heater.
- Normal wear & tear of the product is not covered under warranty

The company accepts no responsibility for any consequential losses arising out of misuse or negligence on the part of the user.

PTC HEATER _____ SAA 713 _____

SERIAL NO. _____ BILL NO. _____

DATE OF PURCHASE _____

NAME OF OWNER _____

ADDRESS _____

Specifications

Input Voltage : 220 - 240 V AC
50 Hz

Power

Consumption : 750/1500W

Packing List : Heater unit
& user's manual

DEALER'S STAMP & SIGNATURE

ALDA
Keep your kitchen alive

Marketed by

Glen Appliances Pvt. Ltd., I-34, DLF Industrial Area, Ph-I, Faridabad

Fax: 0129-227434 Helpline: 9548-130-131

E-mail: enquiry@glenindia.com Website: www.aldaindia.com